




Promessa™ Series Corner Baskets


Revised: 1/4/16

Installation Procedures For The Following Models:

- Model T100-003**
Shallow Corner Basket
- Model T100-004**
Deep Corner Basket

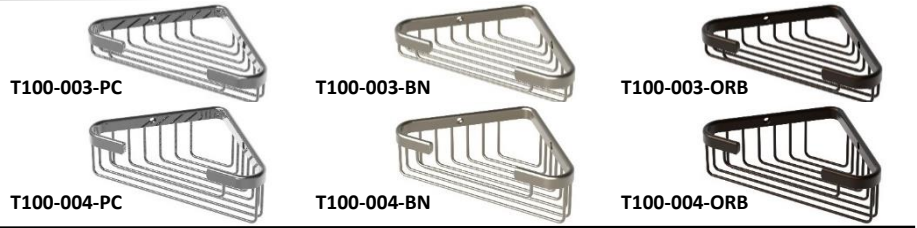


STEP 1 Understanding Stabilizing Bracket

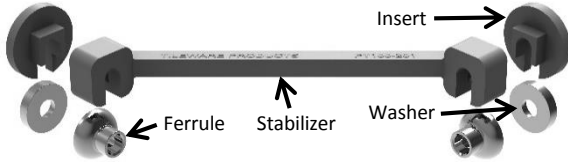


- Each basket kit comes with (1) Corner stabilizer, for standard ferrule applications & (2) inserts for thin-tile washers applications.
- Match each ferrule and washer with the corner stabilizer components above.

STEP 2 Understand Fastener

- Each PermaTile™ Fastener is equipped with a stabilizing bracket. The bracket ensures that basket mounts properly. Remove stabilizer after thin-set has met minimum cure times specified by manufacturer.

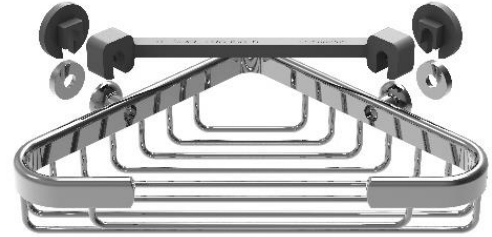


Combine Standard Ferrule with Thin-tile Washer for tile thicknesses 5/32" to 1/4"

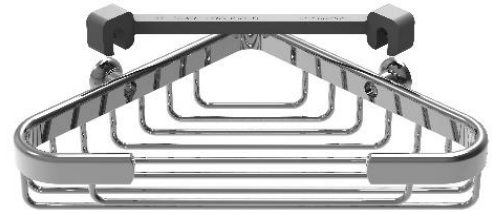

Use Standard Ferrule (only) for tile thicknesses 5/16" to 1/2"


Warning: The success of this installation system requires that the tile professional clearly understands the thickness of a tile product. Failure to understand this requirement will lead to improper installation.

Not using stabilizer will result in basket mounting failure

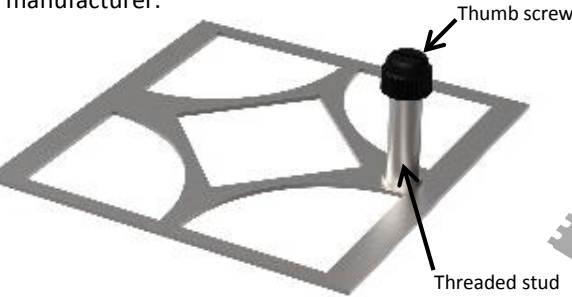

Warning: Each threaded stud is covered with a plastic thumb screw to prevent thin-set mortar from corrupting thread. Do not remove until after grouting.

STEP 3 Determine Basket Location

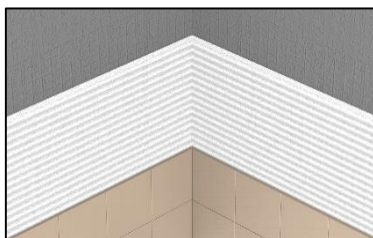

- Determine the wall surface where the PermaTile™ Fastener should be located.
- Apply thin-set mortar with no less than a 1/4" x 3/8" notch trowel.

Warning: Use only latex modified mortars that meet ANSI A118.4/A118.11 performance standard.

STEP 4 Install PermaTile™ Fastener



- Key thin-set mortar into the back side of tile to ensure proper contact and adhesion.
- Press the PermaTile™ Fastener into the combed thin-set mortar at the predetermined location.

STEP 5 Install 2nd PermaTile™ Fastener

- Key thin-set mortar into the back side of tile to ensure proper contact and adhesion.
- Approximate fastener 4" from corner to center of threaded stud before mounting stabilizer.
- Repeat the process on the opposing wall. Press the PermaTile™ Fastener into the combed thin-set mortar at the predetermined location.




Note: System will not work on tile thicknesses less than 5/32" or greater than 1/2"



Promessa™ Series Corner Baskets Installation Procedures For T100-003 & T100-004

STEP 6 Adjust Fasteners

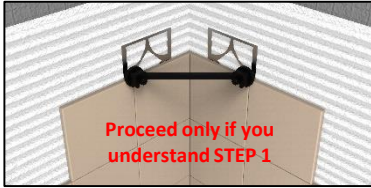

Proceed only if you understand STEP 1

- Adjust fasteners as necessary to align corner stabilizing bracket, tighten thumb screws securely. This draws the fasteners into the required mounting position.

STEP 7 Mark & Notch Tiles



Notch or drill 3/8" or 10mm so basket trim covers holes


- Carefully remove stabilizing bracket marking left & right side notch locations. Using an angle grinder, remove enough material allowing 1/16" of adjustment, side to side and up and down.

STEP 8 Install Notched Tiles



- Install notched tile, key thin-set mortar into the back side of tile to ensure proper contact and adhesion. Press tile into wall and adjust as necessary.

STEP 9 Remount Stabilizer

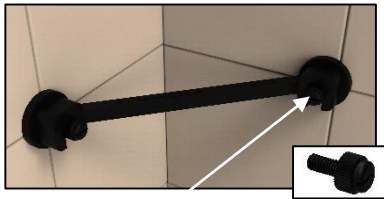

Tighten thumb screws securely


- Remount corner stabilizer bracket as shown and **tighten thumb screws securely.**
- Make sure corner stabilizer is situated flat on tile surface, should fit freely.

STEP 10 Trim options



Standard Ferrule

Use Standard Ferrule (only) for tile thicknesses 5/16" to 1/2"

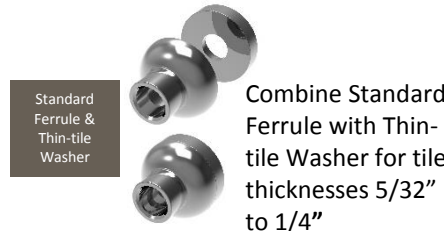

Standard Ferrule & Thin-tile Washer


Combine Standard Ferrule with Thin-tile Washer for tile thicknesses 5/32" to 1/4"

STEP 11 Install Trim



- Immediately proceed to accessory mounting after grouting is completed.
- Simply slip ferrules or ferrules & washers over studs.


STEP 12 Mount Screws

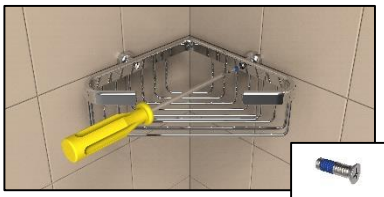

Do not cross-thread

- Install stainless steel screws.

STEP 13 Install Caps

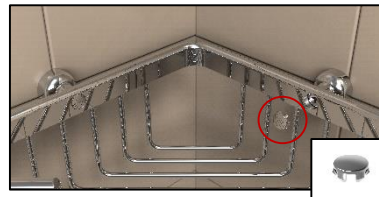

- Install decorative brass caps. Easier if all prongs enter hole then press firmly

Thank you for using our products!

TileWare Products

PO Box 793, Hickory, NC 28603
Technical Support: 828-322-9273
Email: info@tilewareproducts.com
www.tilewareproducts.com

Shallow & Deep Corner Basket Parts List

Shallow Basket Quantity 1 per kit	Deep Corner Basket Quantity 1 per kit	Fastener Assembly quantity 2 per kit	Standard Ferrule quantity 2 per kit	Thin-tile Washer quantity 2 per kit	Cap quantity 2 per kit	8-32 Screw quantity 2 per kit	Plastic Corner Stabilizing Bracket with Inserts quantity 1 set
255289	255292	PT100-504	255245	C220-020	243168	A008185	PT100-201